

Xbee USB Adapter With FT232RL

Xbee USB Adapter with FT232RL shield works with all XBee modules including the Series 1 and Series 2.5, standard and Pro version. Plug the unit into the XBee shield, attach a mini USB cable, and you will have direct access to the serial and programming pins on the XBee unit.



Features

- Needs no external crystal.
- USB 2.0 protocol.
- Single chip USB to asynchronous serial data transfer interface .
- 3.3v and 5v dual power output.
- 3.3v and 5v IO compatible.
- UART interface support for 7 or 8 data bits, 1 or 2 stop bits and odd/even/mark/space/ or no parity.
- Integrated +3.3v level convertor for USB I/O.

Pin Details


Pin	Name	Details
1	GND	Ground
2	rx	receiver
3	tx	transmitter



Working

Xbee USB Adapter with FT232RL shield works with all XBee modules including the Series 1 and Series 2.5, standard and Pro version. Plug the unit into the XBee shield, attach a mini USB cable, and you will have direct access to the serial and programming pins on the XBee unit.

Board Dimensions

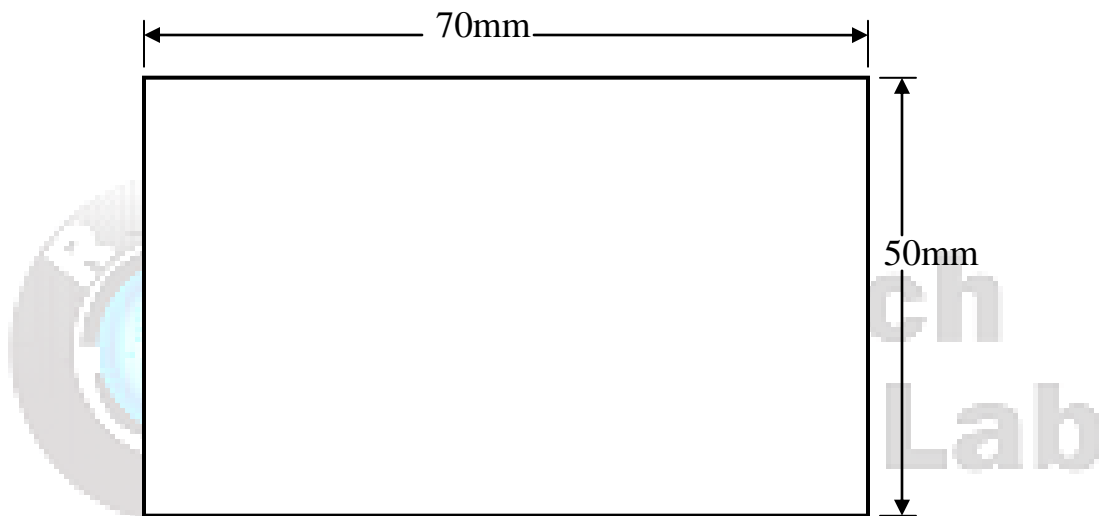

To buy this product click the below link:

<http://researchdesignlab.com/index.php/modules/xbee-usb-adapter-with-ft232rl.html>

To download the driver click the below link:

<http://www.ftdichip.com/Drivers/VCP.htm>